

# REMOVAL OF BELT AND CONVEYORS

To guarantee correct functioning of the Tunnel and prevent wear, depending on use, it is recommended to carry out a complete periodic cleaning (daily-weekly) and to have the product subjected to total maintenance at least every 6 months.

Please read and carefully follow the instructions in the installation and use-maintenance manual.

## PROCEDURE FOR REMOVING THE CONVEYOR BELT



DISCONNECT THE GEARMOTOR FROM THE BELT SHAFT

UNSCREW THE 4 FIXING SCREWS LOWER TO THE BELT (2 screws on each side of the red circle)





REMOVE TAPE (two people required). Once the tape has been removed (only the tape) it can also be washed with a high pressure washer (be careful not to direct the water jet at other components of the oven)



## PROCEDURE FOR REMOVING THE INTERNAL CONVEYORS

REMOVE THE SCREWS (circled in red) FIXING THE LOWER AND UPPER CONVEYORS

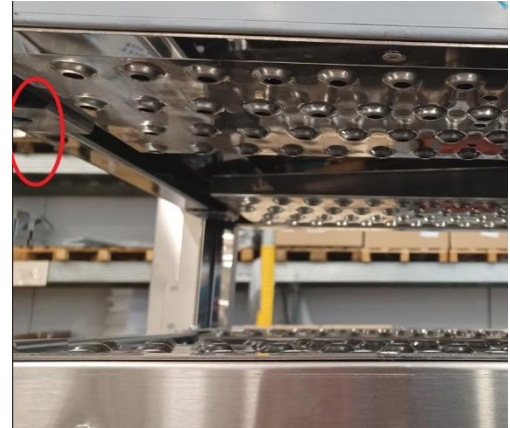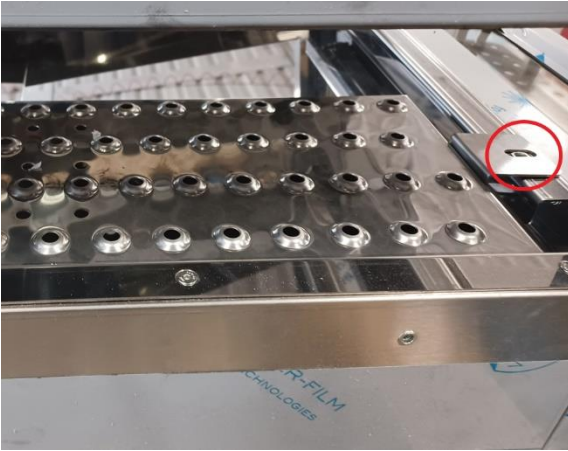

REMOVE THE INTERNAL CONVEYORS

Proceed with careful cleaning of the conveyors if necessary with a high pressure washer (be careful not to direct the water jet at other components of the oven)